

PAUL-GOTHE-GmbH Bochum

Wittener Straße 82
D-44789 Bochum



Manual for pulsation damper Art.-No.: 17.17

to be placed between pump and flowmeter. Entry and exit with quick release hose connector.

Prevents the transfer of pulsations from the pump. The indication of the flowmeter could be disturbed by this pulsation.

Important: Connect the pulsation damper to the pump with the hose and take the other suction hose between pulsation damper and flow meter not less than three meters.

Test of successful pulsation damping:

Close the pump on the inlet side. No flow should be displayed on the gas meter and the cone from the flow meter should be placed at the bottom. If the cone indicates a flow or oscillates, a disturbance still occurs.

Remedy: Increase the hose length between the damper and the flow meter.

